

# PROTECT YOUR INVESTMENT.



## The #1 Selling Bicycle Travel Case, Worldwide.

Introducing the IRONCASE™ from Tricosports®. It's the ultimate in quality, value and protection for your bike. The IRONCASE is constructed from virtually bulletproof Triconium™, the toughest material for a case you can buy. It's large enough to hold virtually any mountain or road bike


with aero bars or bar-ends, yet still meets UPS size requirements. Plus, there is also room for tools, clothes, helmet and full wetsuit. So take the worry out of flying with your bike. Get the IRONCASE. It's the only way to fly.

Call 1-800-473-7705.

**IRON**  **CASE**™

**TRICO**

# Instructions

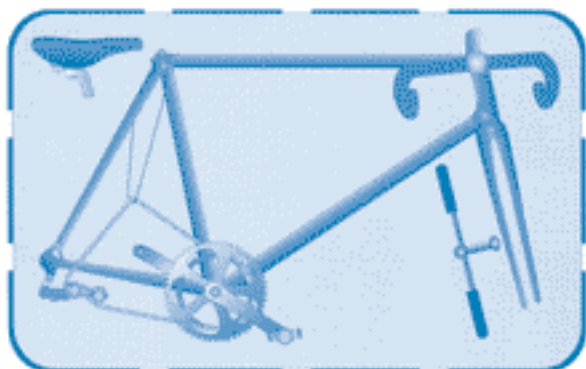

## 1 Set-Up:

- Unbuckle and separate two halves of Ironcase bicycle carrier (capacity: one complete mountain, touring, or road bicycle including aerobars).
- Lay the carrier flat on floor in its open position-Position three belly straps away from carrier.
- Place one regular foam piece inside shell half making sure foam and case are properly aligned.

## 2 Preparation:



- Remove both front and rear wheels from your bicycle
- Install the front and rear fork spreaders (very important).
- Remove skewers from wheel hubs (optional). Remove pedals.
- Depending on frame style either 1.) Loosen and turn your handlebars until they rest against the top tube for road bike frames, or 2.) Remove and place the handlebars inside the case parallel to the forks for mountain bike frames-wrap bars with towel to prevent scratching (cable removal is not required).
- Depending on frame size either lower or remove your seat. (You may want to mark your position on the post with a piece of tape).
- Line up the right crank arm (chain side) with the chain stay tube. Take up the slack in the chain with a bungee cord or nylon string provided-make sure rear derailleur is as close to chain stay tube as possible to prevent damage.

## 3 Placement:

- Lay bike on non-drive side in bottom half of case, front of bike towards handle.
- Place second regular foam piece over frame.
- Lay wheels on top of foam, rear wheel first (free wheel up, then overlap front wheel).
- Place third foam sheet over wheels, (make final check so no bicycle parts or wheels are touching sides of case).

## 4 Closing:

- Close case by placing top shell over bottom half of carrier-make sure both halves fit easily together.
- Fasten and cinch the three strap buckles-adjust for proper snug tightness-make sure all extra accessories (clothing, tools, etc.) are properly wrapped and secured to prevent scratching or denting of bike part.

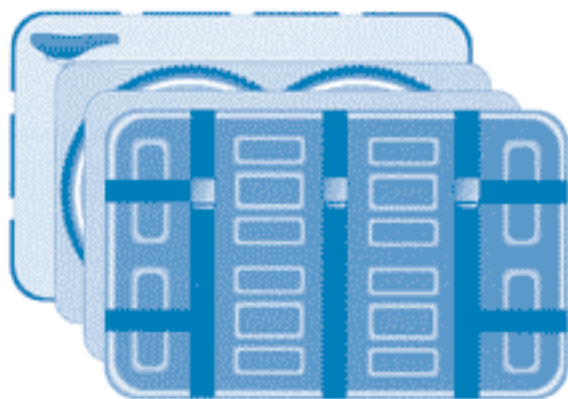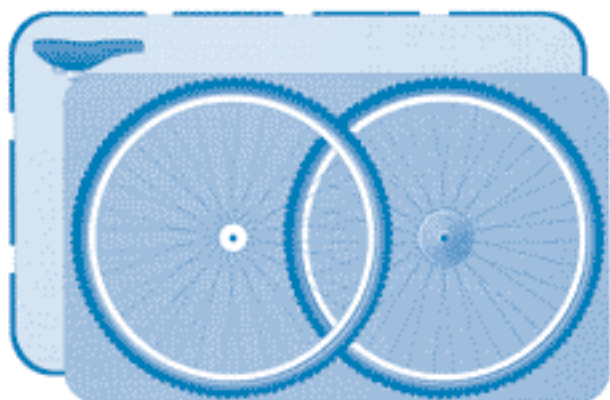

## Optional Locking Instructions

### Recommended Lock Size:

- Master Size # 7 Type Lock.

